

# Replacement Instructions

## CI251

Please ensure you have read the instructions and that no parts are missing prior to installation.

### Please note

If fitting to a fridge or inline cooler, flush the filter into a bucket (until the water runs clear) before reconnecting the tubing to the outlet end (step 3 "b"). Your new filter is premoulded with quick-connect fittings. If your previous filter has a nut on each end, simply follow step 3. Please do not think that we have sent the wrong filter if your old cartridge had a nut on each end.

We recommend turning your purifier off while on holiday or away from home for long periods of time.

The approximate life of your filter is two years and will vary depending on several factors, i.e. manufacturers recommendation, amount of water being used through the filter, turbid water supply, amount of sediment in the water etc. If the flow through the filter decreases or water taste deteriorates it may be time to replace the filter.

For support please phone our technical support team on 0800 787 342

## Step one

Turn the water supply off at clamp (which will look like one in the pictures below) or at your household main water supply. If you have a JG TAP (pictured below) turn the water off there instead.



After turning the water off, turn the water purifier tap on as usual until the flow of water stops. This will confirm that your water has been turned off and relieves the water pressure, enabling the nylon pipe to be easily removed from the quick-connect fittings (collets).

#### Step two

Remove the cartridge from the mounting bracket then remove the nylon pipe from the cartridge by pushing in on the collet (small round sleeve) as shown in Fig A. Pull on the nylon pipe to remove from the cartridge, one end at a time. If the tubing is worn at all, trim it 1cm from the end.




The filter body has high pressure quick-connect fittings (collets), pre-moulded into each end. Check the flow direction arrows on the new cartridge and reattach the tubing simply by pushing the nylon pipe from the clamp into fitting "A" and then the pipe from the faucet into fitting "B". The pipe should go approx. 20 mm into the fitting then stop. Check that the tube is securely held by the collets.

#### Step four

Attach the filter back into the clip, and turn the water back on at the clamp or main water supply. Make sure the filter fits snug into the clip. If the clip has stretched over time, please contact us for a replacement.

## Step five

Let water flow through cartridge for approx. 5 minutes, this is to activate the carbon. Set flow rate to approx. 1 to 3 litres per minute, by adjusting the clamp tap. The first water to come out of the faucet will be black, this is carbon dust and will only last a few seconds then clear.

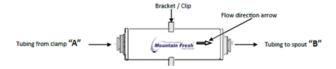



Problem	Solution
You can't remove the tubing from the end of the filter.	Cut the tubing off as straight as possible, close to the filter.
You haven't got enough tubing.	Purchase a replacement length of tubing from Mountain Fresh, or purchase additional tubing and joiner (JG-TAP) by phoning us on 0800 787 342
The filter is leaking from the clamp.	Tighten the compression nut by piercing the lance (illustrated below in figure A).
Your filter is leaking from the filter end:  a. Hairline scratches in the end of tubing.  b. Collet has split.	a. Cut off the affected area of tubing.     b. Replace collet with one from old filter.
The water looks milky in glass after the new filter has been fitted.	The water will clear if you let it sit for a short time. There are thousands of small air bubbles that are released by the cabon. These will dissapear as the carbon is activated.
Water is running black after the new filter has been fitted.	This is normal as the carbon is activated. Continue to run the water and it will clear.
How to dispose of your old filter?	Unfortunately, at this stage our filters are not recyclable. Please dispose of your old filter along with the rest of your household rubbish.

