



Service Instructions

Spring-Action Headworks - BOTFILL Robust Bottle Filler Tap

For support please phone our technical support team on 0800 787 342

Step one

Undo grub screw and unscrew the shroud and take it off.

Step two

Unscrew headworks from tap body and take it out.

Step three

Take headworks apart by holding it by the flats in two places (indicated by red arrows) you will probably need two spanners or a spanner and a vice.

Step four

You will see a small spring (probably broken) and a ball, replace the spring with a new one, put headworks back together.

Step five

Screw headworks into the tap body, **do not** put the shroud back on yet.

Step six

Turn the water back on (push the button a couple of times, make sure it all works) Then start screwing the shroud back on. If the tap starts leaking, that mean the shroud is on too tight (It is now pushing on the button) Just unscrew the shroud a little. Having water supply to the tap at this point helps figure out how far to tighten the shroud.

Step seven

Tighten the grub screw when the shroud is in correct position.

Step eight

Make sure the tap works correctly now, then you are done.

