

## How to Service Spring-Action Head



Please ensure you have read the instructions and that no parts are missing prior to installation.

### SUPPORT:

We are here to help, please call or email our technical support team.

☎ 0800 787 342

✉ [sales@mountainfresh.co.nz](mailto:sales@mountainfresh.co.nz)

#### Step 1

Undo grub screw and unscrew the shroud and take it off

#### Step 2

Unscrew headworks from tap body, take it out

#### Step 3

Take headworks apart by holding it by the flats in two places (indicated by red arrows), you will probably need two spanners or a spanner and a vice



#### Step 4

You will see a small spring (probably broken) and a ball, replace the spring with a new one, put headworks back together

#### Step 5

Screw headworks into the tap body, do not put the shroud back on yet

#### Step 6

Turn the water on (push the button a couple of times, make sure it all works). Then start screwing the shroud back on. If the tap starts leaking, that means the shroud is on too tight (it is now pushing on the button). Just unscrew the shroud a little. (Having water supply to the tap at this point helps figuring out how far to tighten the shroud.)

#### Step 7

Tighten grub screw when the shroud is in correct position

