



Replacement Instructions

Standard Tap

Step one

Turn off water to the unit at the piercing valve/ saddle clamp. As per picture to the right:

Step two

Turn on the tap to check water is turned off; this also relieves the pressure from the lines.

Step three

Undo the Compression Nut; this removes the tubing from the end of the brass shaft.

Step four

Undo the Lock nut from the base.

Step five

You will now be able to lift the tap up and out of the hole on the bench top.

NOTE: your model tap may not have the metal plate with the extra small rubber washer.

Step six

Remove old washer/s and fit new ones in place.

Step seven

Replace tap into hole in bench top and refit the Lock Nut.

Step eight

Replace the Compression Nut, reattaching the tubing to the shaft.

