

Service Instructions

WBUB-L Bubbler - Changing the cartridge & setting the flow

For support please phone our technical support team on 0800 787 342

Fig. 1

**WBUB-L (With
push button
removed)**



Fig. 2

**WBUB-L
(All parts)**



If the fountain has vandal shrouds, you need to undo the locking nut (inside the fountain) that holds the bubbler in place.

Changing the Cartridge

Step one

Undo the chrome nut & remove the push button.

Step two

Unwind the brass holding nut using a pronged tool or circlip pliers and turn anti clockwise. Remove the cartridge.

Step three

Install the new cartridge and tighten brass plate turning clockwise.

Step four

Set the water flow as described below.

Setting the flow

Step one

Install the bubbler.

Step two

Undo the nut holding the press button.

Step three

Remove the button.

Step four

Adjust the white centre-piece to suit required flow.

Step five

Replace the button.

Step six

Replace the nut and secure tightly to prevent undoing by hand.

